



Aiwa	0735, 0731, 1946, 1938
Akai	0391, 0238, 0401, 1567, 0067, 0463, 0775, 0221, 0065, 0039, 0102, 0248, 0744, 0193, 0546, 0745, 0632, 0586, 0611, 0510, 0247, 0661, 0246, 0294, 0478, 0208, 0407, 0636, 1067, 1938, 0503, 0678, 0842
Alba	0039, 0448, 0400, 0265, 0401, 0698, 0067, 0586, 1067, 0385, 0248, 0246, 0277, 0193, 0517, 0611, 0066, 1698, 0609, 1938, 0744, 0473
Amstrad	0207, 0039, 0546, 0294, 0401, 0248, 0067, 0586, 0463, 0442, 0392, 1067, 0678, 0611
Anasonic	0400, 0067, 0586, 0039, 0698, 0404, 0193, 0322, 0132, 0441, 0289, 0277, 1467, 0042, 0458, 0134, 1698
Aristona	0586, 0067, 0042
Audiosonic	0039, 0067, 0404, 0586, 0139, 0744, 0745, 0247, 0400, 0367, 0294, 0248, 0516, 0458
Bang & Olufsen	0595, 0117, 0305
Beko	0516, 0065, 0458, 0744, 0400, 0448, 0067, 1067, 0586, 0636, 0745
Bestar Daewoo	0404
Blaupunkt	0221, 0565, 0225, 0478, 0485, 0200, 0066
Bush	0698, 0248, 0193, 0039, 0066, 0067, 0401, 0265, 0312, 0385, 0393, 0404, 0294, 0391, 1067, 0517, 0238, 0247, 0644, 0647, 0728, 0611, 0586, 0744, 1930, 1938, 1698
Clatronic	0067, 0400, 0401, 0744, 0248, 0294, 0586, 0247, 0277, 0039, 0132, 0350, 0609, 0678, 0636
Condor	0350, 0067, 0586, 0400, 0246, 0039, 0312, 0132, 0277, 0448, 0441, 0193
Crown	0039, 0400, 0516, 0067, 0586, 0517, 0744, 0636, 0745, 0451, 0448, 0609, 0238, 0369
Daewoo	0664, 0404, 1939, 0529, 0691, 0067, 0586, 0039, 0246, 0248, 0247, 0481, 1167, 1932, 1938, 0910
Dansai	0067, 0586, 0294, 0062, 0065, 0246, 0039, 0066, 0247, 0238
Decca	0102, 0546, 0067, 0586, 0247, 1167, 0651, 1938

Dual	0574, 0247, 0067, 0586, 0289, 0382, 0424, 0193, 0561, 1167, 0661
Elbe	0465, 0268, 0289, 0392, 0322, 0400, 0193, 0067, 0586, 0248, 0221, 0441, 0640, 0247, 0546, 0391, 0660
Emerson	0207, 0744, 0208, 0117, 0277, 0067, 0586, 0401, 0100, 0312, 0350, 0391, 1939, 0516, 0400, 0193, 0351
Ferguson	0655, 0317, 0365, 0268, 0139, 0590, 0067, 0586, 0065, 0134, 0138, 0391, 0578
Fidelity	0193, 0542, 0393, 0067, 0586, 0401, 0442, 0561, 0246, 0294, 0574, 1938, 0391
Finlux	0135, 0134, 0067, 0586, 0744, 0376, 0247, 0102, 0193, 0546, 0745, 0100, 0117, 0132, 0441, 0661, 0522, 0510, 0659, 0503, 0448, 0636, 0651
Firstline	0067, 0586, 0404, 0698, 0744, 0193, 0039, 0351, 0246, 0277, 1939, 0132, 0247, 0441, 0574, 0561, 0268, 0102, 0265, 0238, 0391, 1067, 1698, 0838
Fisher	0134, 0247, 0066, 0238, 0400, 0585, 0075, 0117, 0187, 0391, 0193, 0574, 0102
Fujitsu	0236, 0102, 0132, 0247, 0193, 0039, 0382, 0713, 0067, 0586, 0391, 0289, 0883
Fujitsu General	0039, 0247, 0236, 0193
Goldstar	0067, 0039, 0400, 0320, 0062, 0407, 0247, 0208, 0277, 0246, 0586, 0193, 0391, 0139, 0393, 0636, 0074, 0744, 0745
Goodmans	0664, 0404, 0067, 0529, 0586, 1067, 0698, 1939, 0066, 0294, 0102, 0546, 0039, 0320, 0517, 0401, 0265, 0065, 0510, 0590, 0062, 0247, 0365, 0248, 0481, 1938, 0609, 0660, 0691, 1930, 1698
Granada	0067, 0586, 0256, 0386, 0042, 0075, 0102, 0138, 0238, 0247, 0066, 0369, 0546, 0503, 0365, 0590, 0193, 0393, 0578
Grandin	0067, 0586, 0039, 0193, 0640, 0744, 0745, 0698, 0404, 0350, 0312, 0248, 0485, 0609, 1067, 1698, 0895
Grundig	0538, 0565, 0225, 0221, 0517, 0100, 0736, 0067, 0586, 0617, 0039, 0066, 0473, 0400, 1938, 0660
Hanseatic	0067, 0586, 0529, 0193, 0391, 0322, 0574, 0312, 0424, 0350, 0664, 0458, 0400, 0691, 0039, 0247, 0117, 0407, 0744, 0838
Hauppauge	0067, 0586
Hitachi	1255, 0066, 0386, 0074, 0138, 0503, 0193, 0608, 0226, 0247, 0062, 0224, 0546, 0102, 0511, 0529, 0067, 0586, 0139, 0393, 0578, 0749, 0664, 0774, 0208, 1167, 0135, 0522, 1511, 0391, 0542, 0510, 0827, 1075, 0659, 1067, 0914, 1606, 1179
Hitachi Fujian	0138
Hypson	0067, 0586, 0744, 0745, 0294, 0247, 0312, 0485, 0268, 1938, 0698, 1698
Hyundai	0067, 0895, 0586, 0736, 1182

Interfunk	0067, 0586, 0042, 0117, 0542, 0305, 0193, 0391, 0400, 0139, 0277
Intervision	0312, 0247, 0485, 0067, 0401, 0407, 0478, 0516, 0400, 0424, 0517, 0248, 0132, 0193, 0294, 0277, 0039, 0586
ITT Nokia	0391, 0578, 0193, 0503, 0510, 0376, 0238, 0369, 0636, 0640, 0661, 0393
JVC	0683, 0066, 0713, 0401, 0248, 0636, 0448, 0761, 0123
Karcher	0067, 0586, 0451, 0400, 0640, 0193, 0312, 0132, 0294, 0744, 0636
Kendo	0640, 0067, 0586, 0193, 0542, 0400, 0407, 0393, 0458, 0441, 0132, 0265, 0277, 0392
Kenwood	0135
Kneissel	0067, 0400, 0640, 0441, 0404, 0529, 0586, 0465, 0289, 0322, 0268, 0392, 1938
Lenco	0067, 0039, 0193, 0404, 0586, 0134
LG	0067, 0400, 0039, 0407, 0062, 0247, 0586, 0744, 0246, 0320, 0193, 0208, 0636, 0139, 0728, 0745, 0859, 1667, 1176, 1178
Lifetec	0067, 0039, 0404, 0698, 0542, 0685, 1067, 1167, 0586, 0248, 0294, 1698, 0713
Loewe	0542, 0663, 0067, 0586, 0685, 0400, 0117, 0322, 0392, 0820, 0546
Luxor	0224, 1193, 0320, 0393, 0510, 0522, 0391, 0238, 0386, 0578, 0193, 0376, 0503, 1067, 0247, 0661
Matsui	0067, 0586, 0517, 0039, 0265, 0207, 0041, 0385, 0102, 0066, 0247, 0401, 0463, 0473, 0393, 0609, 0485, 0193, 0546, 0065, 0238, 0075, 0225, 0221, 0365, 0744, 0574, 1938, 1067, 0659
Medion	0067, 0698, 0542, 0586, 1167, 0728, 0838, 1938, 1067, 1467, 1930, 1698, 0275
Melectronic	0376, 0067, 0542, 0139, 0277, 0135, 0134, 0404, 0039, 0247, 0510, 0522, 0246, 0441, 0193, 0317, 0586, 0664, 0391, 0221, 0225, 0691
Metz	0225, 0565, 0477, 0221, 0397, 0418, 0776, 0067, 0117, 0586, 0305, 0617, 0698, 1067, 1698
Mitsubishi	0138, 0123, 0542, 0067, 0208, 0117, 0066, 0565, 0586, 0721, 0238, 1067
Multitech	0039, 0393, 0516, 0067, 0400, 0586, 0247, 0246, 0277, 0132, 0294
NEC	0200, 0617, 1200, 1300, 0066, 0350, 0485, 0039, 0404, 0247, 0067, 0586, 0041, 0734, 0275, 0529, 1734, 0801, 0691
Neckerman	0067, 0221, 0400, 1535, 0586, 0193, 0448, 0117, 0277, 0247, 0441, 0350, 0393, 0542
Neufunk	0067, 0039, 0586, 0640, 0248, 0312, 0744

Nikkai	0102, 0248, 0067, 0586, 0247, 0294, 0062, 0065, 0367, 0246, 0039, 0066
Nokia	0391, 0193, 0510, 0578, 0522, 0503, 0369, 0238, 0404, 0661, 0636, 0376, 0350, 0640, 0139
Orion	0067, 0385, 0586, 0685, 0744, 0265, 0473, 0207, 0350, 0041, 0039, 0351, 0132, 0294, 0442, 0546, 0561, 0574, 1946, 1938, 0910
Otto Versand	1535, 0066, 0123, 0542, 0067, 0586, 0565, 0225, 0574, 0221, 0391, 0265, 0139, 0256, 0277, 0350, 0247, 0039, 0312, 0458, 0546
Palladium	0400, 0067, 0221, 1535, 0448, 0586, 0277, 0117, 0193, 0247, 0441, 0685, 0393, 0660, 0744, 1167
Panasonic	0680, 1680, 0138, 0256, 0391, 0397, 0546, 0067, 0586, 0193, 0578, 1340, 0883
Philips	0586, 0067, 0268, 0042, 0221, 0117, 0453, 0404, 0802, 0039, 1786
Pioneer	0196, 0041, 0067, 0200, 0586, 0453, 0458, 0400, 0391, 0139, 0193, 0317, 0516, 0542, 0790
Pionier	0400, 0516
Proline	0067, 0586, 0655, 0664, 0660, 0441, 0042, 0351, 0102, 0651
Protech	0067, 0586, 0247, 0039, 0277, 0132, 0294, 0448, 0367, 0698, 0312, 0193, 0516, 1067, 1698
Quelle	0067, 1535, 0041, 0139, 0542, 0565, 0574, 0221, 0391, 0062, 0066, 0247, 0277, 0100, 0134, 0135, 0698, 0586, 0187, 0225, 0294, 0320, 0376, 0451, 0039, 1698
Radiotone	0039, 0067, 0586, 0458, 0400, 0609, 0448, 0442, 0678, 0698, 0294, 1067, 1698
Samsung	0648, 0617, 0067, 0208, 0586, 0039, 0123, 0247, 0478, 0512, 0400, 0294, 0246, 0320, 0674, 0090, 0062, 0102, 0238, 0712, 0193, 0655, 0842
Sanyo	0238, 0187, 0322, 0066, 0041, 0400, 0369, 0102, 0246, 0247, 0134, 0075, 0585, 0039, 0574, 0193, 0067, 0138, 0586, 0516
Schneider	1167, 0067, 0586, 0042, 0574, 0424, 0382, 0289, 0247, 0277, 0401, 0391, 0248, 0698, 1067, 0193, 0678, 0744, 1939, 1938, 1698
SEG	0067, 0586, 1067, 1467, 0698, 0247, 0517, 0039, 0193, 0294, 0664, 0066, 0132, 0277, 0392, 0246, 0248, 1939, 1698, 1193
Seleco	0236, 0393, 0289, 0392, 0193, 0441, 0703, 0401, 0066, 0294, 0376, 0465
Sharp	0123, 1223, 0187, 0066, 0521, 0683, 0286, 0546, 0790, 0848
Siemens	0221, 0565, 0225, 0187, 0062, 0067, 0586, 0391
Sony	1535, 1681, 0041, 0066, 0132, 0383, 0067, 0586, 0187, 0864
Tandberg	0397, 0441, 0139, 0367, 0226, 0392, 0391, 0193

Teac	0728, 0542, 0067, 1467, 1067, 0586, 0698, 0485, 0247, 0736, 0294, 0574, 1939, 0208, 0039, 0442, 0312, 0448, 0785, 0200, 0744, 1698, 1754, 1179, 1785
Telefunken	0655, 0590, 0139, 0617, 0728, 0528, 0317, 0365, 0226, 0067, 0586, 0516, 0744
Teletch	0067, 0586, 0698, 0039, 0277, 0367, 1067, 1698
Thomson	0655, 0590, 0317, 0139, 0365, 0226, 0067, 0586
Toshiba	0065, 0090, 0538, 0066, 0100, 0132, 1538, 0247, 0139, 0748, 0225, 0221, 0648, 1946, 1938, 0039, 0728, 0067
Triumph	0207, 0546, 0376, 0586, 0067
Universum	0376, 0135, 0565, 0225, 0503, 0391, 0277, 0522, 0510, 0400, 0448, 0041, 0542, 0066, 0187, 0062, 0100, 0193, 0294, 0134, 0067, 0586, 0451, 0441, 0320, 1535, 0698, 0574, 0247, 0139, 0392, 0367, 0207, 0661, 0039, 1067, 1467, 0200, 1698
Vestel	0067, 0193, 0247, 0586, 0698, 1067, 1698, 1193
Waltham	0247, 0386, 0448, 0317, 0067, 0586, 0698, 0139, 1067, 1698
Yamaha	0680, 0827